スマートターミナル EST555Z 取扱説明書

スマートターミナルEST555Zをご購入いただき、まことにありがとうございます。本書は、安全上の注意と取り付け、結線について説明したものです。詳しい取り扱いについては別冊の
スマートターミナルEST555Z 取扱説明書「ハードウエア編」CP-SP-1103(別売品) を用意しています。

使用上の制限について

● 本製品は、一般機器での使用を前提に、開発・設計・製造されております。とくに、下記のような安全性が必要とされる用途に使用する場合は、フェールセーフ設計、冗長設計 および 定期点検の実施など、システム・機器全体の安全に配慮していただいた上でご使用ください。
  ・輸送機器(自動車・列車・船舶等)の制御と安全性に関るユニット
  ・交通用信号機器
  ・防災/防犯装置
  ・各種安全装置
  ・生命維持を直接の目的としない医療機器　　など
● 本製品を
  ・航空機器
  ・宇宙機器
  ・海底中継機器
  ・原子力制御システム
  ・生命維持のための医療機器、装置　　など
  きわめて高い信頼性を要求される用途には、使用しないでください。
● 本製品の働きが直接人命に関る用途には、使用しないでください。
● 本製品を安全スイッチ、非常停止スイッチとして使用しないでください。
● 本製品の使用にあたっては誤動作､破損､動作遅れの際でも安全な冗長設計を配慮していただいた上でご使用ください。

確認してください

開梱時にご注文の商品の形番、破損の有無、付属品は揃っているかを確認してください。
万一、異常や間違いがあった場合は、直ちにお買い上げの販売店までご連絡ください。梱包箱には以下のものが入っています。

品名	形番	数量	備考
本　体 	EST0555Z0[1][2]E[3]0[4] [1] 1 : 電源電圧 AC100V 5 : 電源電圧 DC24V [2] B : 黒色ケース W: 白色ケース [3] X : メモリカード対応なし S : メモリカード対応あり [4] 0 : CE規格対応なし M : CE規格対応あり	1	
取付金具	ESTX939FB00	4	
取扱説明書	CP-UM-5229JE	1	本書です

お願い

この取扱説明書の全部、または一部を無断で複写、または転載することを禁じます。この取扱説明書の内容を将来予告なしに変更することがあります。
この取扱説明書の内容については、万全を期しておりますが、万一ご不審な点や記入もれなどがありましたら、当社までお申し出ください。お客様が運用された結果につきましては、責任を負いかねる場合がございますので、ご了承ください。

©2001 Yamatake Corporation ALL RIGHTS RESERVED

安全上の注意

この安全上の注意は、製品を安全に正しくお使いいただき、あなたや他の人々への危害や財産への損害を未然に防止するためのものです。安全上の注意は必ず守ってください。また、内容をよく理解してから本文をお読みください。

⚠ 警告

・本器の取り付け、取り外しおよび配線作業のときは必ず電源を切った状態で行ってください。感電の恐れがあります。
・分解・改造を行わないでください。内部には高電圧部分があり、感電の危険性および故障や火災の恐れがあります。
・腐食性ガス、可燃性ガス、有機溶剤などの雰囲気では使用しないでください。故障や火災の危険性があります。
・本器が故障・誤動作した場合も、機械装置が安全に停止するように、コントローラのシステム設計、リスクアセスメントを実施してください。
・非常停止回路は、本器とは別に専用のスイッチ・配線で構成してください。また、安全や機械損傷に影響のあるインターロックは、本器とは別の専用回路で構成してください。

⚠ 注意

・表示部を叩いたり、とがったものや強い力で押さないでください。表示部が割れ、けがや故障の原因になります。
・周囲温度、電源電圧などは仕様範囲内でお使いください。仕様範囲外で使うと故障の原因となります。
・内部に異物(水、油、配線くず、金属くずなど)やドライバなどを入れないでください。故障の原因となります。
・通風穴をふさいだり、外部の熱源により温度上昇するような閉鎖した場所での保管や使用は避けてください。故障の原因となります。
・直射日光の当たる場所やほこりの多い場所での保管や使用は避けてください。
・衝撃を与えたり、振動の加わる場所での保管や使用は避けてください。
・本体、とくに前面に衝撃を与えたりつついて傷をつけないようご注意ください。故障の恐れがあります。
・そりやでこぼこのない平らなパネルに垂直に取り付けてください。表面保護仕様や温度仕様を満足できなくなり、故障の恐れがあります。
・一度はがした保護シートは再使用しないでください。
  また、保護シート交換のときは本体側に残った粘着物を取り除いてください。
・有機溶剤で本体や表面をふかないでください。
・不慮の事故により内部データが失われた場合のために、アプリケーションデータは必ずバックアップしておいてください。
・落雷時の事故防止のため、屋外配線はしないでください。

1. 各部の名称と機能

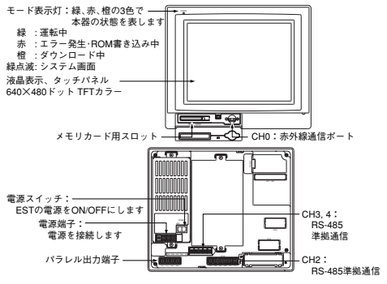

2. 設置・取り付け

■ パネルカット

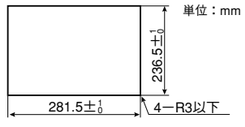

■ 取り付け

パネルのカットした穴に表面から本器を挿入してください。付属の取付金具を本体の上下各2カ所の穴に差し込み、ねじを締め付けて固定してください。



・本器に付いているパッキンが外れていないことを確認してください
・取付金具が動かなくなった状態からさらに1/2～1回転だけねじを締め付けてください

! 取扱い上の注意

ねじを締めすぎると変形し、破損することがあります。

3. 接　続

■ インタフェース信号

● **CH1:RS-232C準拠通信 DSUB　9ピンコネクタ**

ピン番号	信号名	内　容	チャンネル	入出力
1	NC	接続なし	ー	ー
2	RD1	受信データ	CH1	入力
3	SD1	送信データ	CH1	出力
4	ER1	DR(6ピン)と内部接続	CH1	
5	SG	信号グランド	ー	ー
6	DR1	ER(4ピン)と内部接続	CH1	ー
7	RS1	送信要求	CH1	出力
8	CS1	送信許可	CH1	入力
9	NC	接続なし	ー	ー
シェル	ー	接続なし	ー	ー

適合コネクタ : 第一電子工業(株)製17JE-13090-02(D8C2)または相当品

● **CH2:RS-485準拠通信(全・半二重) 端子台**



信号名	内　容	チャンネル	入出力
SDA	送信データ(+)	CH2	出力
SDB	送信データ(ー)	CH2	出力
RDA	受信データ(+)	CH2	入力
RDB	受信データ(ー)	CH2	入力
SG	信号グランド	ー	ー
FG	フレームグランド中継用端子	ー	ー

● **CH3、CH4:RS-485準拠通信(半二重) 端子台**



信号名	内　容	チャンネル	入出力
DA3	送受信データ(+)	CH3	入出力
DB3	送受信データ(ー)	CH3	入出力
DA4	送受信データ(+)	CH4	入出力
DB4	送受信データ(ー)	CH4	入出力
SG	信号グランド	CH3/4共用	ー

! 取扱い上の注意

CH3、CH4はRS-485半二重通信用です。
CH3は、CH2を三菱CPU直結モードに指定したときには、出力専用(RSA、RSB)端子となります。

● **パラレル出力端子**

信号名	内　容
C(+)	DC4.5～26.4V
C(ー)	グランド
DO1	出力1 *
DO2	出力2 *

*初期設定では
DO1 : RUN中出力、
DO2 : 代表スイッチ出力です

■ 電源端子

● **AC用**



信号名	内　容
L	AC100V入力
N	
FG	フレームグランド

● **DC用**



信号名	内　容
ー	GND
＋	＋24V
FG	フレームグランド

! 取扱い上の注意

FG端子は必ず専用接地(D種接地、接地抵抗100Ω以下)に接続してください。

■ 推奨圧着端子

端子	ねじ	締付トルク	X(下図)(mm)	推奨圧着端子(JIS規格表示)	適用電線断面積mm²	日本圧着端子(株) 形番(参考)
電源端子 パラレル出力端子 CH2 RS-485端子	M4	1.2N･m以下	8.6	RAV1.25-4	0.25～1.65	V1.25-4
CH3,4 RS-485端子	M3	0.5N･m以下	7.2	RAV1.25-3		V1.25-3

! 取扱い上の注意

・ねじが緩んだときの短絡防止のため、絶縁スリーブ付き圧着端子を使用してください。
・取付金具の締付トルク値は上記とは異なります。

■ 配線時の注意

入出力信号線、電源入力線、接地線は動力機器の電線系統とは別に敷設してください。
どうしても別に敷設できないときはシールドケーブルを使用し、シールド一端を接地してください。

4. 外形寸法

単位:mm

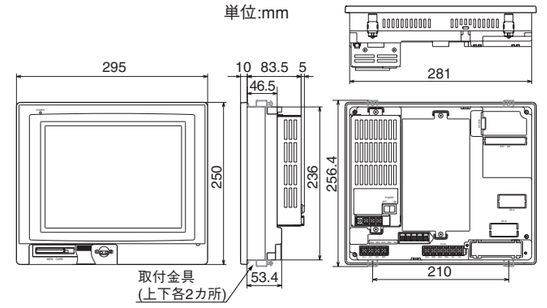

5. 適合規格

EST0555Z0□□E□0Mは以下の規格に適合します。
EN50081-2、EN61000-6-2

6. 廃棄について

EU

本器を廃棄するときは、内蔵の電池を取り外し、各自治体の条例または規則に従って適切に処理してください。

(1) 保護シートをはがしてください。
本体右下に半円形のくぼみがあります。そこに小型のマイナスドライバを差込み、保護シートを持ち上げ、ゆっくりはがしてください。

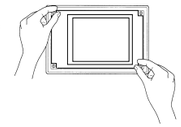

(2) 表示ユニットを外してください。
マイナスドライバで表示ユニットを固定している4本のねじを緩めてください。対角の2カ所のねじを持ち、本体から表示ユニットを外してください。

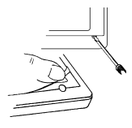

(3) バッテリを持ち上げながら手前に引いて外してください。

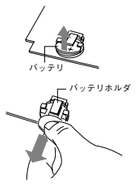

〔ご注意〕この資料の記載内容は、お断りなく変更する場合もありますのでご了承ください。 (16)

株式会社 山武
アドバンスオートメーションカンパニー
本　社　〒100-6419　東京都千代田区丸の内2-7-3　東京ビル
北海道支店 ☎(011)781-5396　中 部 支 社 ☎(052)238-3037
東 北 支 店 ☎(022)292-2004　関 西 支 社 ☎(06)6881-3383～4
北関東支店 ☎(048)653-8733　中 国 支 店 ☎(082)554-0750
東 京 支 社 ☎(03)6810-1211～2　九 州 支 社 ☎(093)952-1210
製品のお問い合わせ、計装のご相談は…
コールセンター:☎0466-20-2143
〈COMPO CLUBアドレス〉 http://www.compoclub.com
〈山武ホームページアドレス〉 http://jp.azbil.com

2001年 8月 初版発行(C)
2008年10月 改訂4版(A)

EST555Z SMART TERMINAL User's Manual

Thank you for purchasing the Smart Terminal EST555Z.
This manual contains information ensuring correct use of the EST555Z. It also provides necessary information for safety precautions, installation and conections. For further details on correct use, read the Smart Terminal EST555Z Installation Manual CP-SP-1103E (Sold separately).

RESTRICTIONS ON USE

This product has been designed, developed and manufactured for general-purpose application in machinery and equipment.
Accordingly, when used in applications outlined below, special care should be taken to implement a fail-safe and/or redundant design concept as well as a periodic maintenance program.

- Units for concerning to control and safety of transportation vehicles (auto-mobiles, trains and ships, etc.)
- Traffic control systems
- Anti-disaster systems, anti-crime systems
- Safety equipment
- Medical equipment (not specifically designed for life support)

Never use this product in applications which require extremely high reliability, such as those outlined below.

- Aeronautical machines
- Aerospace machines
- Submersible repeaters
- Nuclear reactor control systems
- Life support systems (medical equipment, etc.)

Never use this product in applications where human safety may be put at risk.
Never use this product as a safety switch or as an emergency stop switch. Special care should be taken to implement a fail-safe and/or redundant design which takes into account the possibility of operational delay, unit damage and malfunction of this product.

UNPACKING

Check the following items when removing the EST555Z from its package:

Check the model No. to make sure that you have received the product that you ordered.
Check the EST555Z for any apparent physical damage.
Check the contents of the package against the Package List to make sure that all accessories are included in the package.

After unpacking, handle the EST555Z and its accessories taking care to prevent damage or loss of parts.If an inconsistency is found or the package contents are not in order, immediately contact your dealer.

Name	Model No.	Q'ty	Remarks
Body	EST0555Z0[1][2]E[3]0[4] [1] 1 : Power voltage 100Vac 5 : Power voltage 24Vdc [2] B : Black case W: White case [3] X : Memory card function is not supported S : Memory card function is supported [4] 0 : CE marking standards are not applicable M : CE marking standards are applicable	1	
Mounting bracket	ESTX939FB00	4	
Manual No.	CP-UM-5229JE	1	This manual

REQUEST

Ensure that this User's Manual is handed over to the user before the product is used.
Copying or duplicating this User's Manual in part or in whole is forbidden. The information and specifications in this User's Manual are subject to change without notice.
Considerable effort has been made to ensure that this User's Manual is free from inaccuracies and omissions.
If you should find any inaccuracies or omissions, please contact Yamatake Corporation.
In no event is Yamatake Corporation liable to anyone for any indirect, special or consequential damages as a result of using this product.

©2001 Yamatake Corporation ALL RIGHTS RESERVED

SAFETY PRECAUTIONS

Safety precautions are for ensuring safe and correct use of this product, and for preventing injury to the operator and other people or damage to property. You must observe these safety precautions. Also, be sure to read and understand the content of this User's manual.

⚠ WARNING

- Be sure to turn off the power when you wire, assemble or disassemble the EST555Z.
  Otherwise, electric shock hazard could occur.
- Do not disassemble or remodel this product as the high voltage unit mounted inside might cause an electric shock, fire, or the product to malfunction.
- Do not use this product in environments of corrosive or flammable gases or organic solvents as such condi-tions might cause a fire, or the product to malfunction.
- Design the controller system and conduct risk assessment in order for the equipment to shut down in case of operational malfunction or failure.
- Make an emergency shutdown circuit with a dedicated switch and wiring separate from this product. Make a safety interlock against machinery damage with a dedicated circuit separate from this product.

⚠ CAUTION

- Do not strike the touch panel with a strong force, or do not push the touch panel with a sharp tool or a strong force. The touch panel would be broken and the broken pieces may cause injury.
- Use this product within specifications of ambient temperature and power supply voltage as usage out of specification range might cause operational failure.
- Prevent debris of wiring or other foreign materials from entering the EST555Z. It may cause trouble or burning the EST555Z.
- Do not close the ventilation panel of case. Store this product in a well-ventilated room to avoid exposure to extremely high temperatures caused by external heat sources. Failure to do so might cause the product to malfunction.
- Store this product in a location away from dust and exposure to direct sunlight.
- Do not store or use this product where it is exposed to direct shocks or vibrations.
- Be careful not to give a shock to the body, especially to the front face, or scratch it by something sharp-pointed. Otherwise, malfunction may occur.
- Install vertically on a flat panel with no warping or rough surfaces. Failure to do so might result in not meeting specifications for surface protection or temperature, thus causing operational failure.
- Do not reuse the panel protective sheet. Remove any adhesives remaining on the product's surfaces before replacing the panel protective sheet.
- Do not wipe the body or surfaces of product with organic solvents.
- Make a back up of application data to prevent the loss of internal data in the event of an accident.
- Do not connect to outdoor wiring, or lightening could cause malfunction.

1. NAMES AND FUNCTIONS OF PARTS

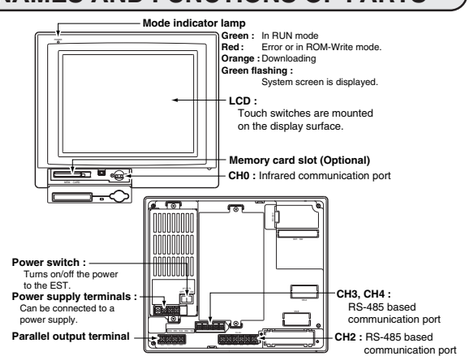

■ Panel cut-out dimensions

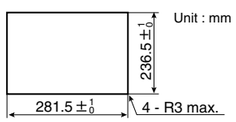

2. INSTALLATION AND WIRING

■ Installation

Insert the body in the cut-out panel.
Use the provided four metal fittings with screws to secure the top and bottom of the EST555Z to the panel.

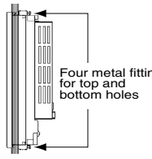

- Make sure that the case packing attached to the body is not missing.
- When the heads of the screws of the four metal fittings are flush with the panel and there is no looseness, turn the screws an extra half to one full turn to ensure that the EST555Z is firmly secured.

! Handling Precautions

Overtightening the screws of the four metal fittings can deform or damage the case.

3. CONNECTIONS

■ Interface signals

● CH1:RS-232C based communication DSUB 9pin connector



Pin No.	Signal	Description	Channel	Input/ Output
1	NC	No connection	–	–
2	RD1	Reception data	CH1	Input
3	SD1	Transmission data	CH1	Output
4	ER1	Connected with DR(6-pin) internally	CH1	
5	SG	Signal ground	–	–
6	DR1	Connected with ER (4-pin) internally	CH1	
7	RS1	Transmission request	CH1	Output
8	CS1	Transmission permission	CH1	Input
9	NC	No connection	–	–
Shell	-	No connection	–	–

Recommended connector:DDK Ltd. 17JE-13090-02(D8C2)or equivalent

● CH2:RS-485 based full-/half- duplex communication terminal block

Signal	Description	Channel	Input/ Output
SDA	Transmission data (+)	CH2	Output
SDB	Transmission data (-)	CH2	Output
RDA	Reception data (+)	CH2	Input
RDB	Reception data (-)	CH2	Input
SG	Signal ground	–	–
FG	Frame Ground daisy-chain terminal	–	–

● CH3, CH4:RS-485 based half-duplex communication terminal block

Signal	Description	Channel	Input/ Output
DA3	Transmission/Reception data (+)	CH3	Input/Output
DB3	Transmission/Reception data (-)	CH3	Input/Output
DA4	Transmission/Reception data (+)	CH4	Input/Output
DB4	Transmission/Reception data (-)	CH4	Input/Output
SG	Signal ground	CH3,CH4	–

! Handling Precautions

CH3 and CH4 are for the RS-485 based half-duplex communication.
When CH2 is specified as the direct connection mode for the MITSUBISHI CPU, CH3 becomes an output-only terminal (RSA, RSB).

● Parallel output

Signal	Description
C(+)	4.5 to 26.4Vdc
C(-)	Ground
DO1	Output1 *
DO2	Output2 *

* In initial setting:
DO1 is the RUN mode output.
DO2 is typical switch output.

■ Power supply connection

● AC



Signal	Description
L	100Vac Input
N	
FG	Flame ground

● DC



Signal	Description
-	GND
+	+24Vdc
FG	Flame ground

! Handling Precautions

Be sure to connect the FG terminal to the dedicated ground (ground resistance lower than 100Ω).

■ Recommended crimp type terminal lug

Terminal	Screw	Tightening torque	X [mm]	Recommended crimp contact JIS specifications	Suitable cross-sectional area of the wire [mm]^2	Parts No. of J.S.T. MFG CO., Ltd
Power supply terminal Parallel output terminal CH2 RS-485terminal	M4	1.2N·m max.	8.6	RAV1.25-4	0.25 to 1.65	V1.25-4
CH3,4 RS-485terminal	M3	0.5N·m max.	7.2	RAV1.25-3		V1.25-3

! Handling Precautions

- To prevent the short circuit due to loosening of screws, use the crimp type terminal lug with insulator.
- Please note that the tightening torque for the metal fittings is different.

■ Wiring precautions

Input/output signal cable, power supply input cable, and grounding cable, should be wired separately from power cables.
If routing these cables together cannot be avoided, use a shielded cable, and ground one end of the shield.
Attach a circuit breaker to the power supply input of the EST555Z, or use a DC power supply with current limiting.

4. EXTERNAL DIMENSIONS

Unit:mm

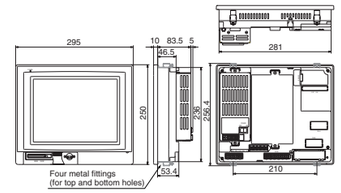

5. APPLICABLE STANDARDS

EST0555Z0❑❑E❑0M is applicable for these standards.
EN50081-2, EN61000-6-2

6. DISPOSAL

EU

When discarding, remove the battery and dispose of both the product and the battery as industrial waste, following local regulations.

(1) Remove the protective sheet from the panel.
There is a semi-circular recess at the lower right part of the screen. Insert a small flat-head screwdriver into this recess and pull off the sheet gently.

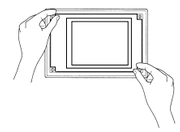

(2) The display unit is secured with 4 screws. Loosen the screws with a flat-head screwdriver.
Remove the display unit from the main unit by lifting the mounting screws.

(3) Lift the front of the battery and pull the battery out of the holder as shown below.



azbil
Specifications are subject to change without notice. (08)

Yamatake Corporation
Advanced Automation Company

1-12-2 Kawana, Fujisawa
Kanagawa 251-8522 Japan

URL: http://www.azbil.com

1st Edition: Issued in Aug. 2001(C)
4th Edition: Issued in Oct. 2008(A)