## MagneW <sup>™</sup> FLEX+ Electromagnetic Flowmeter Converter

Model MGG10C

#### **OVERVIEW**

MagneW FLEX+ electromagnetic flowmeter converter is a high-performance and highly reliable flowmeter converter based on Azbil's proven MagneW3000 FLEX flow measurement technologies.

The MagneW FLEX+ converter offers expanded flow rate measurement capabilities in the various processes when used with the MagneW detectors.

#### **FEATURES**

# Improve the performances and functions (compared with Azbil conventional type converter

- Improve noise immunity performance up to 250 %
- Adopts the averaging function for pulsation flow application
- According to noise in the field, MagneW FLEX+ converter provides an appropriate noise immunity technology like excitation frequency change and/or auto spike cut function.
- High speed response type is optional for batch application.
- Light in weight design (600 gram lighter than the conventional type converter)

### Universal power supply

• AC 90 to 130 V, AC 180 to 250 V.

## Liquid Crystal Display with backlighting (optional)

- Backlit display eases reading in direct sunlight or in a dark room.
- Simultaneously displays flow volume in percentage, actual flow rate and totalized value.
- Rotating display improves visibility of integral models mounted on pipes up to 90 degrees from standard.



## Setting parameters by infrared touch sensor (optional)

- Allows safety setting, in severe environments, without opening the cover.
- Prevent malfunctioning of the infrared touch sensor via special security feature.

## Compatibility

• Enables combination of the remote style MagneW FLEX+ converter with the conventional Azbil detectors. Consult your Azbil representative.

## **COMMUNICATION (SELECTABLE)**

- Azbil SFN protocol
- HART protocol (HART Rev. 5)

## **APPLICATIONS**

Available for various applications

## **Pulp and Paper**

Pulp slurries, chemicals, green liquor, white water, white liquor, black liquor, corrosive fluid, industrial water, waste water

#### Petroleum/Petrochemical/Chemicals

Corrosive fluid, electrolyte, dyestuffs, chemicals, industrial water, waste water

## Water/Waste water

Tap water, sewage water, sludge, sediment slurries, effluent

### **Food and Beverage**

Beer, milk, juice, wine, liquor, soy sauce, potable water, industrial water, waste water

## Steel/Metal and Mining

Alumina slurry, cooling water, sea water, corrosive fluid, industrial water, waste water

## **Machinery**

Corrosive fluid, cooling water, circulating water, waste water

## **Building/Construction**

Building material slurry, sediment slurry, cement, industrial water

#### **Electric Power/Gas**

Corrosive fluid, cooling water, industrial water, waste water

#### **FUNCTIONAL SPECIFICATIONS**

## Type of protection

### **Enclosure rating**

JIS C 0920 Waterproof NEMA ICS6-110.16 TYPE4X IEC IP66

### **Power supply**

#### Normal operating voltage:

AC 100 to 120 V, AC200 to 240 V, 47 to 63 Hz

### **Operational voltage limit:**

AC 90 to 130 V, AC180 to 250 V, 47 to 63 Hz

### **Power consumption**

10 W max. (AC 90 to 130 V) 11 W max. (AC 180 to 250 V)

## **Lightning protection**

Conform to IEC 61000-4-5

Equipped with the lightning arrester in the power source and external input and output terminals.

#### **Power failure**

An EEPROM retains data record of the totalized value when pulse output is used (retention period approximately 10 years).

## **EMC conformity standards**

EN61326

### Input signal

## Flow rate signal

Electromotive force which is proportional to the average flow velocity.

#### **Contact input**

Solid-state contact or no-voltage contact (2 max.)

#### **Output signal**

#### **Analog output**

 $4\ to\ 20\ mA\ DC$ 

#### **Digital output**

DE

Analog or digital output is selectable.

## **Contact output**

Open collector (2 max.)

### **Contact capacity**

DC 30 V max., 200 mA max.

## **Pulse output**

Open collector

#### **Contact capacity**

DC 30 V max., 200 mA max.

## **Pulse Frequency**

0.00006 to 3000 Hz

#### Pulse width

adjustable from 0.10 to 999.99 ms or fixed at 50 % of the duty (In case of pulse frequency is 0.00006 to 0.5 Hz, pulse

width is fixed at 1sec.)

Voltage drop during transistor ON: 2.7 V typ. (Voltage

drop can be reduced to 2.0 V by a switch)

## Counter drive pulse output

Coil voltage: 24 VDC Coil resistance: 210  $\Omega$  Pulse frequency: 0 to 20 Hz

Pulse width: adjustable from 30 ms to 999.99 ms.

#### Analog output range/load resistance

#### Without SFC communication

0.8 to 22.4 mA (-20 to +115 %) Load resistance: 0 to 600  $\Omega$ 

#### With SFC communication

3.2 to 22.4 mA (-5 to +115 %)

External power supply for SFC communication: 16 to 45 V DC Load resistance ( $\Omega$ ) = (External power supply voltage -8.5 V)/0.025

## With HART communication by using Internal power supply

3.2 to 22.4 mA (-5 to +115 %)

External power supply for SFC communication: 16 to 45 V DC Load resistance: 0 to 600  $\Omega$ 

\_\_\_\_\_\_

## With HART communication by using an external power supply

3.2 to 22.4 mA (-5 to +115 %)

External power supply for HART communication: 16 to 45 V DC Load resistance ( $\Omega$ ) = (External power supply voltage -8.5 V)/0.025

## High-speed response type/no communication function

0.8 to 22.4 mA (-20 to +115 %) Load resistance: 0 to 600  $\Omega$ 

## Digital output range/load resistance

With DE output

3.2 to 22.4 mA (-5 to +115 %)

External power supply for DE communication: 16 to 45 V DC Load resistance ( $\Omega$ ) = (External power supply voltage -8.5 V)/0.025

#### Unit of flow rate

Selectable from %, volumetric flow rate unit, mass flow rate unit time

Volumetric flow rate: m<sup>3</sup>, l, cm<sup>3</sup> Mass flow rate: t, kg, g Time: d, h, min., s

## **Operation Mode**

MEASURING MODE: Mode for flow rate measurement

BASIC SETUP MODE: Mode for quick start-up

ENGINEERING MODE: Mode for parameter configura-

tion (Range, pulse scale, etc.)

MAINTENANCE MODE: Mode for maintenance

ADVANCED MODE: Mode for advanced functions

## Auto zeroing function (in the BASIC SETUP MODE)

Adjust zero automatically

## **Damping (in the BASIC SETUP MODE)**

Adjustable between 0.1 and 199.9 seconds

High-speed response type: Adjustable between 0 and 199.9

seconds

## Averaging function (in the ADVANCED MODE)

Moving average processing of the measured flow rate ON/OFF, Adjustable between 1.0 and 30.0 seconds

## **Spike cut function (in the ADVANCED MODE)**

Eliminates steep noise spikes. Auto/Manual/OFF

## Low flow cutoff

Adjustable between 0 and 10 % of setting range Below selected value, output is driven to the zero flow rate signal level.

#### **Drop out**

Adjustable between 0 and 10 % of setting range Below selected value, pulse output is fixed at 0 %.

#### Fail-safe mode

Determine analog/pulse output direction when the flow meter detects a critical status condition. LOW/HIGH/HOLD

## Compensation coefficient (in the ADVANCED MODE)

Compensation coefficient used to multiply the output flow rate as required.

#### **Built-in counter function**

#### **Totalizer**

According to the pulse scale setting, it totals one count at a time. If double range of normal/reverse flow measurement function is set, it totals one count at a time for normal and reverse flows. If single range of flow measurement is set, it totals one count at a time only for normal flow direction.

## **Totalizer with presetting function**

A preset value (target totalized value) can be set between 0000000000 and 9999999999.

The counting method is same as that of the standard totalizer.

## Normal/reverse flow difference totalizer

The difference in flow volumes in the normal or reverse flow directions is calculated and counted.

## **Contact input function**

## **External 0 % lock input**

Forces outputs (analog, digital, pulse) to the zero flow rate signal level.

#### External automatic zero adjustment input

Adjust zero.

#### **External range switching input**

Switches two flow measurement ranges.

## Two flow measurement ranges:

Dual range for nominal direction. Normal/reverse range

#### **Built-in counter reset input**

Resets the totalized value in the built-in counter.

## **Contact output function**

## **Alarm output**

Outputs an alarm under the following conditions.

- · Self-diagnostic result
- Empty pipe detection
- · High/low limit alarm

## Range switching output

Outputs the status of flow range.

- Large/small in the dual range
- Normal/reverse

## Counter preset status output

Activates when the counter reaches the preset value.

### Self-diagnostic result output

Activates only when a critical failure appears by the self-diagnostic.

## **Empty detection output**

Activates only when empty status (when electrodes are in contact with air) is detected.

Please make sure that there is no air trap inside of the detector and process fluid conductivity should be 30 mS/cm or greater for functioning properly.

#### High/low limit alarm output

Activates when a high/low limit occurs.

## Two-stage flow rate alarm output (with two contact outputs)

Activates when the first high/low limit alarm (H/L) occurs and the second high/low limit alarm (HH/LL) occurs.

## Function table by contact-input/contact output

Table 1. one contact input and one contact output

Table 2. two contact inputs

Table 3. two contact outputs

Table 1. one contact input and one contact output

Range function	Built-in counter function	Contact input function	Contact output function
0: Single range	A: Addition	X: Not activated	X: Not activated
			1: Alarm output
			4: Self-check result output
			5: Empty detection function
			6: High/low limit alarm
		1: External 0 % lock	X: Not activated
			1: Alarm output
			4: Self-check result output
			5: Empty detection function
			6: High/low limit alarm
		2: External auto zeroing	X: Not activated
			1: Alarm output
			4: Self-check result output
			5: Empty detection function
			6: High/low limit alarm
		4: Counter reset	X: Not activated
			1: Alarm output
			4: Self-check result output
			5: Empty detection function
			6: High/low limit alarm
	B: Addition with preset	X: Not activated	3: Preset output
		1: External 0 % lock	3: Preset output
		2: External auto zeroing	3: Preset output
		4: Counter reset	3: Preset output

Range function	Built-in counter function	Contact input function	Contact output function
1: Automatic switching		X: Not activated	2: Range switching output
double range function	A: Addition	1: External 0 % lock	2: Range switching output
		2: External auto zeroing	2: Range switching output
		4: Counter reset	2: Range switching output

Range function	Built-in counter function	Contact input function	Contact output function
2: External switching	A: Addition	3: External range switching	X: Not activated
double range	le range		1: Alarm output
			2: Range switching output
			4: Self-check result output
			5: Empty detection function
			6: High/low limit alarm
	B: Addition with preset	3: External range switching	3: Preset output

Range function	Built-in counter function	Contact input function	Contact output function
3: Normal/reverse	A: Addition	X: Not activated	2: Range switching output
automatic switching range		1: External 0 % lock	2: Range switching output
Tange		2: External auto zeroing	2: Range switching output
		4: Counter reset	2: Range switching output
	C: Normal/reverse totalization	X: Not activated	2: Range switching output
		1: External 0 % lock	2: Range switching output
		2: External auto zeroing	2: Range switching output
		4: Counter reset	2: Range switching output

Range function	Built-in counter function	Contact input function	Contact output function
4: Normal/reverse	A: Addition	3: External range switching	X: Not activated
external switching range			1: Alarm output
Tange			2: Range switching output
			4: Self-check result output
			5: Empty detection function
			6: High/low limit alarm
	B: Addition with preset	3: External range switching	3: Preset output
	C: Normal/reverse totalization	3: External range switching	X: Not activated
			1: Alarm output
			2: Range switching output
			4: Self-check result output
			5: Empty detection function
			6: High/low limit alarm

6

Table 2. two contact inputs

Range function	Built-in counter function	Contact input function	Contact output function
0: Single range	A: Addition	X: Not activated	X: Not activated
		1: External 0 % lock	X: Not activated
		2: External auto zeroing	X: Not activated
		4: Counter reset	X: Not activated
		5: External 0 % lock + Auto zeroing	X: Not activated
		7: External 0 % lock + Counter reset	X: Not activated
		9: External auto zeroing + Counter reset	X: Not activated

Range function	Built-in counter function	Contact input function	Contact output function
2: External switching	A: Addition	3 External range switching	X: Not activated
double range		6: External 0 % lock + Range switching	X: Not activated
8: External auto		8: External auto zeroing + Range switching	X: Not activated
		A: External range switching + Counter reset	X: Not activated

Range function	Built-in counter function	Contact input function	Contact output function
4: Normal/reverse	A: Addition	3 External range switching	X: Not activated
external switching		6: External 0 % lock + Range switching	X: Not activated
range		8: External auto zeroing + Range switching	X: Not activated
		A: External range switching + Counter reset	X: Not activated
	C: Normal/reverse totalization	3 External range switching	X: Not activated
		6: External 0 % lock + Range switching	X: Not activated
		8: External auto zeroing + Range switching	X: Not activated
		A: External range switching + Counter reset	X: Not activated

## Table 3. two contact outputs

Range function	Built-in counter function	Contact input function	Contact output function
0: Single range	A: Addition	X: Not activated	X: Not activated
			1: Alarm output
			4: Self-check result output
			5: Empty detection function
			6: High/low limit alarm
			E: High 1 and High 2 alarm or Low 1 and Low 2 alarm
			I: Self-check result + Empty detection
			J: Self-check result + High/Low limit alarm
			K: Empty detection + High/Low limit alarm
	B: Addition with preset	X: Not activated	3: Preset output
			D: Alarm + Preset output
			F: Preset + Self-check
			G: Preset + Empty detection
			H: Preset + High/low limit alarm

Range function	Built-in counter function	Contact input function	Contact output function
1: Automatic	A: Addition	X: Not activated	2: Range switching output
switching double range			7: Alarm + Range switching output
Tange			8:Self-check result + Range switching output
			9: Empty detection + Range switching output
			A: High/low limit alarm + Range switching output
			C: Range switching output + Self-check, Empty detection
	B: Addition with preset	X: Not activated	B: Range switching output + Preset output

Range function	Built-in counter function	Contact input function	Contact output function
3: Normal/	A: Addition	X: Not activated	2: Range switching output
reverse automatic switching range			7: Alarm + Range switching output
switching range			8:Self-check result + Range switching output
			9: Empty detection + Range switching output
			A: High/low limit alarm + Range switching output
			C: Range switching output + Self-check, Empty detection
	B: Addition with preset	X: Not activated	B: Range switching output + Preset output
	C: Normal/reverse totalization	X: Not activated	2: Range switching output
			7: Alarm + Range switching output
			8:Self-check result + Range switching output
			9: Empty detection + Range switching output
			A: High/low limit alarm + Range switching output
			C: Range switching output + Self-check, Empty detection

## **Detectors coupled with MGG10C converter**

MGG10C works with the following Azbil detectors. In case of interchanging the converter only, recalibration with the detector at Azbil factory is recommended for ensuring accurate measurement.

Integral style:

MGG11D, MGG11F, MGG11U, MGS11U, MGS11F, KID80A, KID90A, KID70A

Remote style:

MGG11D, MGG11F, MGG11U, MGG12D, MGG12F, MGG12U, MGS11U, MGS11F, MGG15D, MGG15F, KID15B, KID80B, KID90B, KID70B, KID20B, KID30B, KID10B, KID11B, KID12B, NNK140, NNM (some types are not compatible.)

## **Optional specifications**

## Display (optional): LCD with backlighting

### Main display

7-segment, 6 digits

## Sub display

16 digits, two lines

#### Display

Flow rate in %, Actual flow rate, Totalized value Configuration parameters, Self-diagnostic, Write protect status

Main display is selectable among "flow rate in %", "actual flow rate" and "totalized value".

## Data setting device

Configuration by infrared ray touch sensor

Infrared ray touch sensor: Four switches

Write protect: Write protection level is set by switches in the converter.

Write protect level is indicated on the display.

#### **Empty pipe detection**

When the detector is empty, the analog output, digital output and pulse output are fixed at zero. Display is latched to

#### Traceability certificate

The following three documents are provided.

- Traceability system chart
- Traceability certificate
- Calibration certificate

#### Indication other than SI units

The following non-SI units are available.

Volume unit: B (barrel), G (gallon), kG (kilo-gallon), mG (milli-gallon), IG (imperial gallon)

Mass unit: lb (pound)

### Tag number on the terminal box

The designated tag numbers (maximum 16 characters) should be stamped on a tag plate, which is attached to the terminal box. One line can contain 8 characters. Tag numbersexceed 8haracters will be stamped on the two lines.

### Air purge hole with PT1/4 internal thread

Prepare air purge hole with PT1/4 internal thread by using one of the conduits of the converter.

## PERFORMANCE SPECIFICATION

## Measurable process fluid conductivity

It depends on the cable length between the converter and the detector.)

With the detector size of 2.5 to 1100 mm 3 µS/cm or greater

## Accuracy (coupled with MGG, MGS and KID90 type detectors)

#### Table 4.

in combination with a detector <Size 2.5 to 15 mm (0.1 to 1/2 inch)> Vs = Velocity of setting range

Vs (m/s)	Velocity during measurement ≥ Vs × 40 %	Velocity during measurement ≤ Vs × 40 %			
$1.0 \leq \mathrm{Vs} \leq 10$	±0.5 % of rate	±0.2 % of Vs			
$0.1 \le \text{Vs} \le 1.0$	±(0.1/Vs+0.4)% of rate	±0.4(0.1/Vs+0.4)% of Vs			

<Size 25 to 600 mm (1 to 24 inches)>

Vs = Velocity of setting range

Vs (m/s)	Velocity during measurement ≥ Vs × 20 %	Velocity during measurement ≤ Vs × 20 %							
$1.0 \leq \mathrm{Vs} \leq 10$	±0.5 % of rate	±0.1 % of Vs							
$0.1 \le \text{Vs} \le 1.0$	±(0.1/Vs+0.4)% of rate	±0.2(0.1/Vs+0.4)% of Vs							

<Size 700 to 1100 mm (28 to 44 inches)>

Vs = Velocity of setting range

•		
Vs (m/s)	Velocity during measurement ≥ Vs × 50 %	Velocity during measurement ≤ Vs × 50 %
$1.0 \le \mathrm{Vs} \le 10$	±1.0 % of rate	±0.5 % of Vs
$0.1 \le Vs \le 1.0$	$\pm (0.2/\text{Vs}+0.8)\%$ of rate	(0.2/Vs+0.8)% of Vs

## Magnetic field effect

±0.2 %FS max. (400 A/m)

#### **Fluctuation**

Range set as  $1 \le Vs \le 10$ m/s:  $\pm 0.1$  %FS max. Range set as  $0.1 \le Vs \le 1$ m/s:  $\pm 0.1$ /Vs %FS max. (Damping: 3seconds, with clean water (150  $\mu$ S/cm))

## PHYSICAL SPECIFICATION

## Housing and cover material

Aluminum alloy (ADC12)

#### Glass

Tempered glass (thickness 5 mm)

## Name plate material

SUS304 (thickness 0.5 mm)

#### Screw material

SUS304

## Gasket material between housing and cover

**EPDM** 

#### **Paint**

Standard paint: Acrylic baking finish Corrosion-proof paint: Urethane baking finish

#### Color

Cover: light beige (Munsell 4Y7.2/1.3) Housing: dark beige (Munsell 10YR4.7/0/5)

## **INSTALLATION SPECIFICATION**

## **Ambient temperature**

-25 to +60 °C

## **Ambient humidity**

5~100 %RH (no condensation)

### **Vibration**

Integral style: 500 Hz max.  $4.9 \text{ m/s}^2$  (0.5 G) max. Remote style: 500 Hz max.,  $19.6 \text{ m/s}^2$  (2 G) max.

#### **Conduit connection**

G1/2 (PF1/2) internal thread, 1/2NPT internal thread, CM20 internal thread, pg13.5 internal thread

## Mounting

Remote style: Wall mounting, 2-inch pipe mounting Integral style: Mount on the detector

#### Grounding

Grounding resistance: 100 W max.

## Weight

3.1 kg

#### Site selection

When selecting an installation site for the flowmeter, observe the following safety measures:

- Do not install the flowmeter near high-current power lines, motors or transformers to prevent damage from electromagnetic induction, which can cause equipment malfunction or output errors.
- Do not use the flowmeter to ground a welder. It can damage the flowmeter.
- Be sure to ground the welding power transformer when welding near the flowmeter to avoid output errors.
- Avoid locations subject to severe vibration or highly corrosive atmospheres to prevent detector breakage or equipment damage.
- Do not install the flowmeter in a location subject to direct sunlight, wind and rain. The converter and detector can be damaged.

## **MODEL SELECTION**

## MagneW FLEX+ Converter (Integral style)

Model MGG10C - I II III IV - V VI VII VIII - / Options (Some options can be selected per each model.)

Basic m	odel no.	- -	Selec	tions			Optio	onal se	lectior	ıs
	MGG10C	<u>-</u>								
	•									
I P	ower supply	100 to 120 V AC, 200 to 240 V AC, 47 to 63 Hz	M							
	11 /	24 V DC, noise filter 50 Hz	P							
		24 V DC, noise filter 60 Hz	R							
		110 V DC, 50 Hz	S							
		110 V DC, 60 Hz	Т							
II C	Output signal /	Volume flow 4 to 20 mA DC output / with open collector pul-	se	Н						
	Communication	output / with HART communication								
		Volume flow 4 to 20 mA DC output / with open collector pul-	se	В						
		output / with SFC communication								
		Volume flow DE output / with open collector pulse output /		С						
		without communication								
		Volume flow 4 to 20 mA DC output / with open collector pul-	se	R						
		output /without communication								
		Volume flow 4 to 20 mA DC output / with counter collector of	lrive	S						
		pulse output /without communication								
	Electrical G1/2 internal thread / without watertight gland				1					
	onnection / Vatertight gland	G1/2 internal thread / with brass (Ni-plated) watertight gland			2					
'	vater tigitt glaria	G1/2 internal thread / with plastic watertight gland			3					
		1/2NPT internal thread / without watertight gland (Note 2)			4					
		CM20 internal thread / without watertight gland			5					
		Pg13.5 internal thread / without watertight gland			6					
		G1/2 internal thread / with SUS304 watertight gland			7					
IV Installation / Wiring		Horizontal piping mounting / upstream side				A				
a	irection	Horizontal piping mounting / downstream side				В				
		Horizontal piping mounting / left side viewed from upstream				С				
		Horizontal piping mounting / right side viewed from upstream				D				
		$\label{lem:continuous} Vertical\ piping\ mounting\ /\ downstream\ side\ (flow\ direction:\ upstream)$	downs	tream to	0	E				
		$\label{thm:continuous} \mbox{Vertical piping mounting / downstream side (flow direction: downstream)}$	upstrea	am to		F				
		Vertical piping mounting / (flow direction: downstream to up	stream	)		Т				
		Vertical piping mounting / (flow direction : upstream to down	n-strea	n)		V				
V F	inish	Standard paint: Acrylic baking finish					1			
	İ	Corrosion-proof paint: Urethane baking finish				,	2			
	Display with data None							X		
se	etting device	Main display: instantaneous flow rate in %						A		
		Main display: instantaneous actual flow rate						В		
		Main display: indication of totalized value (Note 3)						С		
VII C	Contact inputs /	1 input and 1 output (ranging function, warning for contact is	nput/o	ıtput, et	tc.)				1	
	utputs	2 inputs (ranging function, external automatic zero adjustment input, etc.)							2	
	2 outputs (ranging function, warning for contact outputs.)								3	
/III S	tyle code	None								

	None	X
	Empty pipe detection function	A
	Traceability certificate for converter	С
	Plastic (Poly carbonate) window	
	Indication other than SI units	Н
	Attachment of the TAG number to the terminal box for converter (Note 4)	J
JS	Specific color paint (Note 5)	L
Options	with photo of the device	N
O <sub>t</sub>	with PT1/4 thread for air parge	Q

Note) 1. In case of this code, it is necessary to supply 16 to 45 V DC on 4 to 20mA DC signal line.

- 2. Must be selected for FM / CSA NI approval.
- 3. In case of this code, option "B" must be selected.
- 4. Must be selected for Tag no. requirement.
- 5. Must specify Munsell No.

## MagneW FLEX+ Converter (Remote style)


Model MGG10C - I II III IV - V VI VII VIII - Options (Some options can be selected per each model.)

Basic n	nodel no.	-	Selec	tions			•	Optio	nal se	lection	18
	MGG10C	-					Γ				
		'					Ī				
I I	Power supply	100 to 120 V AC, 200 to 240 V AC, 47 to 63 Hz	M								
		24 V DC, noise filter 50 Hz	P								
		24 V DC, noise filter 60 Hz	R				İ				
		110 V AC, 50 Hz	S								
		110 V AC, 60 Hz	Т								
II Output signal / Volume flow 4 to 20		Volume flow 4 to 20 mA DC output / with open collector pulsoutput / with HART communication	se	Н							
		Volume flow 4 to 20 mA DC output / with open collector pulsoutput / with SFC communication	se	В							
		Volume flow DE output / with open collector pulse output / without communication		С							
		Volume flow 4 to 20 mA DC output / with open collector pulsoutput /without communication		R							
		Volume flow 4 to 20 mA DC output / with counter collector of pulse output /without communication	lrive	S							
III I	Electrical	G1/2 internal thread / without watertight gland			1	1					
	connection / Watertight gland	G1/2 internal thread / with brass (Ni-plated) watertight gland	l		2		İ				
'		G1/2 internal thread / with plastic watertight gland			3		İ				
		1/2NPT internal thread / without watertight gland (Note 2)			4						
		CM20 internal thread / without watertight gland			5	1					
		Pg13.5 internal thread / without watertight gland			6		İ				
İ				7		İ					
IV I	nstallation / Wiring	Wall mounting with standard bracket				G					
C	direction	2-inch pipe mounting with standard bracket				Н					
		Wall mounting with SUS304 bracket				J					
		2-inch pipe mounting with SUS304 bracket				K					
V	Finish	Standard paint: Acrylic baking finish						1			
		Corrosion-proof paint: Urethane baking finish						2			
	Display with data setting device Main display: instantaneous indication of flow volume in %		X								
s									A		
		Main display: instantaneous indication of actual flow volume							В		
Main display: indication of integrated flow volu		Main display: indication of integrated flow volume (Note 3)	ote 3)				С				
	Contact inputs /	1 input and 1 output (ranging function, warning for contact in			tc.)					1	
C	outputs 2 inputs (ranging function, external automatic zero adjustm		ment input, etc.)					2			
		2 outputs (ranging function, warning for contact outputs.)								3	
VIII S	Style code	None							7		

	None				
	Empty pipe detection function	A			
	Traceability certificate for converter	С			
	Plastic (Bicarbonate) window				
	Indication other than SI units				
	Attachment of the TAG number to the terminal box for converter (Note 4)	J			
su	Specific color paint (Note 5)	L			
Options	with photo of the device	N			
Oľ	with PT1/4 thread for air pauge	Q			




Installation / Wiring direction

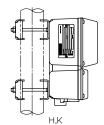


Note) 1. In case of this code, it is necessary to supply 16 to 45 V DC on 4 to 20 mA DC signal line.

- 2. Must be selected for FM / CSA NI approval.
- 3. In case of this code, option "B" must be selected.
- 4. Must be selected for Tag no. requirement
- 5. Must specify Munsell No.

## **MOUNTING / WIRING DIRECTION**

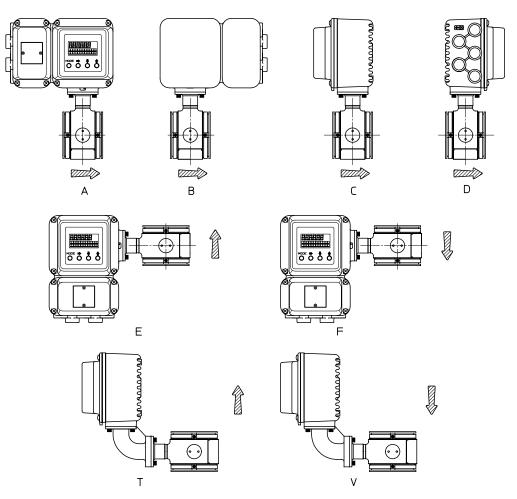

## **CONDUIT CONNECTION / WATERTIGHT GLAND**

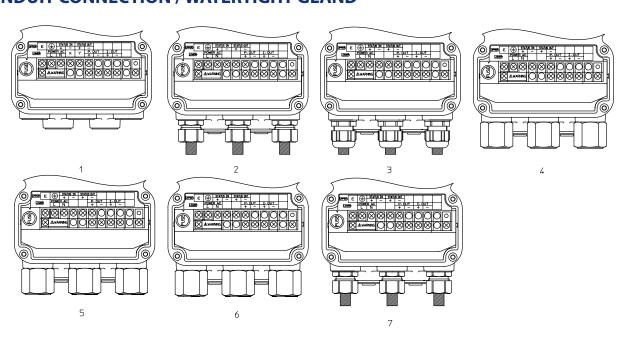

## **CONVERTER TERMINAL DESCRIPTION**

## Table 5. Remote converter terminal descriptions

(1-contact output / 1-contact input)

(1 001114000 00	ic, i contact mp ac,			
Symbol		Description		
A				
В				
С				
SA		from detector		
SB		Description  Flow signal input from detector  Analog output  Pulse output  Excitation output  Contact output  Contact input  Power supply  Not used  Grounding		
I. OUT	+	Analog output		
P. OUT	+	Pulse output		
X				
Y		Excitation output		
STATUS OUT	+	Contact output		
STATUS IN	+	Contact input		
POWER AC	L N	Power supply		
Е		Not used		
<u></u>		Grounding (grounding resistance must be $< 100 \Omega$ )		

(2-contact inputs)


Symbol		Description
A		
В		
С		Flow signal input
SA		nom detector
SB		
I. OUT	+	Analog output
P. OUT	+	Pulse output
X		F '' ''
Y		Excitation output
STATUS	+	Contact innut 2
IN 2	_	Contact input 2
STATUS	+	Contact input 1
IN 1	-	Contact input 1
POWER AC	L	Dayyar aynnly
POWERAC	N	Power supply
Е		Not used
<u></u>		Grounding (grounding resistance
		must be $< 100 \Omega$ )

(2-contact outputs)

Symbol		Description		
A		,		
В				
С		Flow signal input		
SA		from detector		
SB				
I. OUT	+	Analog output		
P. OUT	+	Pulse output		
X		F '' ' '		
Y		Excitation output		
STATUS + OUT1 -		Contact output1		
STATUS IOUT2	+	Contact output2		
POWER AC L		Power supply		
Е		Not used		
<u></u>		Grounding (grounding resistance must be $< 100 \Omega$ )		

Note)


## **CONDUIT CONNECTION / WATERTIGHT GLAND**

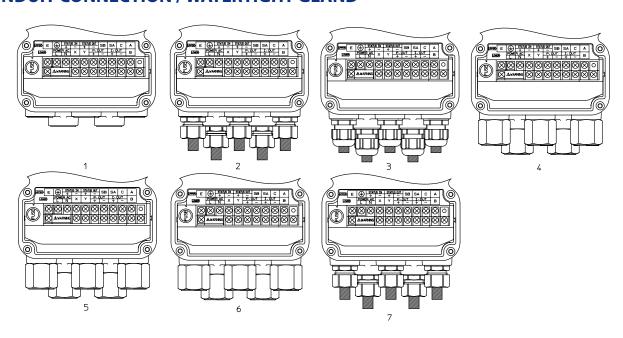


## **Dimension drawings**

#### [Unit: mm]


## **Wall mounting**

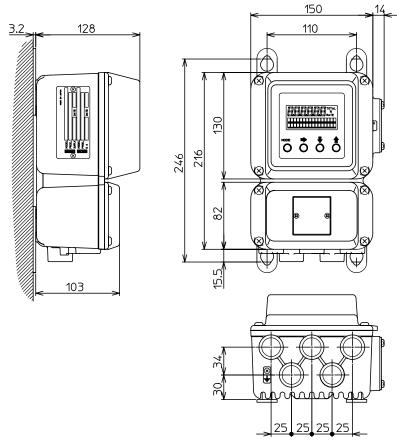


## 2 inch pipe mounting

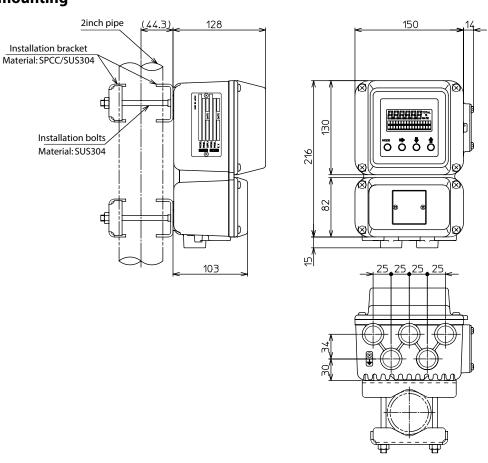

Integral type [Unit: mm]

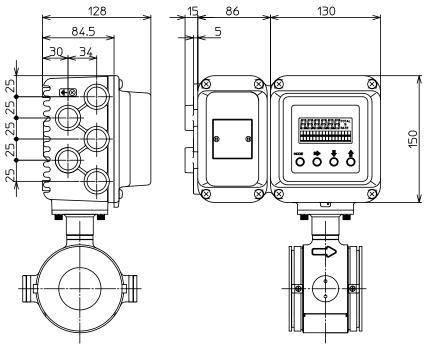

## Flange type

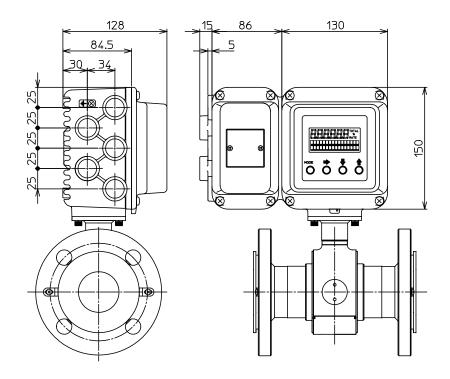

MagneW is a trademark of Azbil Corporation in Japan and/or other countries.

Please read "Terms and Conditions" from the following URL before ordering and use.

https://www.azbil.com/products/factory/order.html

Specifications are subject to change without notice.



## **Azbil Corporation**

**Advanced Automation Company** 

1-12-2 Kawana, Fujisawa Kanagawa 251-8522 Japan URL: https://www.azbil.com/